

REFRIGERATOR



INSTRUCTIONS

STEP 1

Be sure that the on/off switch is in the **ON** position. This switch is located on the top right of unit.

STEP 2

Inside temperature of refrigerator will be displayed (press the **RESET** button if the interior temperature is not displayed).

STEP 3

Press the **SET** button(4th button from the left with thermometer pictured) to display the current set point.

STEP 4

Press the **UP** or **DOWN** arrow button to adjust to the desired temperature.

STEP 5

Please note: The snowflake button will set your refrigerator into defrost mode. It will take two hours to drop your temperature back down.



DO NOT PRESS THE SNOWFLAKE BUTTON.



EVENT SOURCE
PANACHE EVENTS

consistently delivering™

EVENT SOURCE
EventSource.com
877.901.0000

PANACHE EVENTS
PanacheEvents.com
800.30.PARTY (72789)

AFTER HOURS

Call above toll free numbers and press Option 2. Please leave a message and we will respond shortly.

SKU 304-1100 INCLUDES
3 Grates



WARNING

Plug the refrigerator into an electrical outlet by itself. Failure to do this will weaken effectiveness of the refrigerator or blow the fuse.



NOTE

The set point should be between 35° and 40°F.