

COTTON CANDY MACHINE



INSTRUCTIONS

STEP 1

Make sure motor is positioned in the center of the cart and switches are facing the opening.

STEP 2

Plug the machine into a standard electrical outlet.

STEP 3

Fill center of machine with approximately one cup or less of sugar.

STEP 4

Moisten Whirl Grip (mesh screen) with a damp sponge. This process allows the floss to adhere to the side of the floss bowl.

STEP 5

Turn the motor switch **ON** and turn the heat switch to **MEDIUM**.

STEP 6

Dampen cone slightly and twirl cone approximately 1 inch away from Whirl Grip. Do not stop twirling until machine is turned off.

STEP 7

Work floss away from the center of machine. You may make several servings, approximately up to 10 at once, but will have to stop to allow machine to cool to prevent the sugar from burning.

STEP 8 **Step 8 is crucial to prevent sugar from clogging and burning.**

Once you have made the servings, you must turn off the heat switch first.

STEP 9

Allow machine to cool for a few minutes.

STEP 10

When you are ready to make more servings, repeat 5-9.

STEP 11

When finished, turn off heat switch first.

STEP 12

When cool, turn **OFF** the motor switch.

COTTON CANDY SUPPLIES

Servings:		500	1000	2000
Floss Mix	1/2 gallon	10	20	40
Floss Cones	100 pack	5	10	20
Plastic Bags	100 pack	5	10	20



EVENT SOURCE
PANACHE EVENTS

consistently delivering™

EVENT SOURCE
EventSource.com
877.901.0000

PANACHE EVENTS
PanacheEvents.com
800.30.PARTY (72789)

AFTER HOURS

Call above toll free numbers and press Option 2. Please leave a message and we will respond shortly.

SKU 552-500 INCLUDES

Machine/Cart
Floss Bowl
Clear Bubble Guard
While Grip, 4 Clips

OPTIONS

Floss sugar carton 1/2 gallon
Cotton candy cones
Cotton candy bags



WARNING

Do not put hand close to the center of the machine while operating.

Please do not attempt to clean this machine as problems may occur.



NOTE

Step 8 is crucial to prevent sugar from clogging and burning.