

COTTON CANDY MACHINE

Includes: Machine/Cart, Floss Bowl, Clear Bubble Guard, Whirl Grip, 4 Clips
Optional: Floss Sugar Carton, Cotton Candy Cones, Cotton Candy Bags



INSTRUCTIONS

STEP 1

Make sure motor is positioned in the center of the cart and switches are facing the opening.

STEP 2

Plug the machine into a standard electrical outlet.

STEP 3

Fill center of machine with approximately one cup or less of sugar.

STEP 4

Moisten Whirl Grip (mesh screen) with a damp cloth. This process allows the floss to adhere to the side of the floss bowl.

STEP 5

Turn the motor switch **ON** and turn the heat switch to **MEDIUM**.

STEP 6

Dampen cone slightly and twirl cone approximately 1 inch away from Whirl Grip. Do not stop twirling until the machine is turned off.

STEP 7

Work floss away from the center of machine. You may make several servings, approximately up to 10 at once but will have to stop to allow machine to cool to prevent the sugar from burning.

STEP 8 - IMPORTANT

Once you have made the servings, turn off the heat switch first.

STEP 9

Allow the machine to cool for a few minutes.

STEP 10

When you are ready to make more servings, repeat steps 5-9.

STEP 11

When finished, turn off the heat switch first.

STEP 12

When cool, turn **OFF** the motor switch.

Cotton Candy Supplies

Servings	Floss Mix (½ gal)	Floss Cones (100pk)	Plastic Bags (100pk)
500	10	5	5
1000	20	10	10
2000	40	20	20

AFTER HOURS:

Contact your local branch.



WARNING

Do not put hand close to the center of the machine while operating.

Please do not attempt to clean this machine.

NOTE

Step 8 is crucial to prevent sugar from clogging and burning.