

FREEZER

Includes: 3 Grates



INSTRUCTIONS

STEP 1

Turn the ON/OFF switch to the **ON** position (located on the top right of the unit).

STEP 2

Inside temperature of the refrigerator will be displayed (press the **RESET** button if the interior temperature is not displayed).

STEP 3

Press the **SET** button (4th button from the left, with thermometer pictured) to display the current set point.

STEP 4

Press the **UP** or **DOWN** arrow button to adjust to the desired temperature.

STEP 5

The snowflake button will set your refrigerator into defrost mode. It will take two hours for the temperature to drop back down.

Do not press the snowflake button.

AFTER HOURS:

Contact your local branch.



WARNING

Plug the freezer into an electrical outlet by itself. Failure to do this will weaken the effectiveness of the freezer or blow the fuse.

NOTE

Only press the snowflake button if defrosting is needed. It will take two hours for the temperature to drop back down.