

WOOD BURNING PIZZA OVEN



INSTRUCTIONS

STEP 1

Remove cover.

STEP 2

Remove front door and place wood (not included) inside oven.

STEP 3

Light wood.

STEP 4

Once you reach desired temperature, use brush (not included) to push wood to the rear of the oven.

STEP 5

Oven will be ready to use. Adjust flames to desired heat for cooking. The small front door closure retains heat, though it is possible to remove this door during operation.

AFTER HOURS:

Contact your local branch.



NOTE

No propane or kit needed.

Wood and wood brush not included.