

# SNO-KONE MACHINE

Includes: Main Unit, Cone Trap, Scoop

Optional: Flavored Syrups, Pumps, Cups



## INSTRUCTIONS

---

### STEP 1

Start the motor and fill the gooseneck with ice cubes or block ice broken into 3"-4" pieces. The larger the piece of ice, the better the snow. Fill to about an inch from the top.

### STEP 2

Push the pusher handle down to press the ice against the cutterhead. A firm, even pressure is all that is required, but sometimes you will find it better to relieve the pressure two or three times on the way down. This rearranges the ice and permits a better bite against the cutter.

### STEP 3

**DO NOT** force the handle or the motor will stall.

### STEP 4

When too much pressure is necessary, relieve the handle, and come down again. Too much pressure on the pusher handle will make the ice come out coarse; too little pressure makes the ice mushy.

### Sno-Kone Supplies

Servings	Flavored Syrup (1 gal)	Cones (200 pk)
250	2	1
500	5	3
1000	10	5
2000	20	10

### AFTER HOURS:

Contact your local branch.

---



### WARNING

Machine must be properly grounded to prevent shock in case of electrical problems. The motor is 110V, single-phase, 60 cycle, AC current.

### NOTE

During normal operations, the surface temperature will reach 150°F.