

PUNCH FOUNTAIN



INSTRUCTIONS

STEP 1

Cool beverage before filling. When the fountain is running, the pump will slightly warm the liquid over time. We recommend freezing an ice ring or juice cubes to keep the beverage cold.

STEP 2

Fill the fountain with 5 gallons of beverage.

STEP 3

Plug the machine into an outlet to start the pump.



EVENT SOURCE
PANACHE EVENTS

consistently delivering™

EVENT SOURCE
EventSource.com
877.901.0000

PANACHE EVENTS
PanacheEvents.com
800.30.PARTY (72789)

AFTER HOURS

Call above toll free numbers and press Option 2. Please leave a message and we will respond shortly.

SKU 351-1300



WARNING

Do not immerse the base of the fountain under water.



NOTE

Please use a pulp-free beverage so that the fountain does not clog.

Please refill fountain often. Do not let the fountain dry.

Operating capacity may fail if the fountain is not used on a separate outlet.