

# SNO-KONE MACHINE



## INSTRUCTIONS

### STEP 1

Start the motor and fill the gooseneck with ice cubes or block ice broken into 3"-4" pieces. The larger the piece of ice, the better the snow. Fill to about an inch from the top.

### STEP 2

Push the pusher handle down to press the ice against the cutterhead. A firm, even pressure is all that is required, but sometimes you will find it better to relieve the pressure two or three times on the way down. This rearranges the ice and permits a better bite against the cutter.

### STEP 3

DO NOT FORCE THE HANDLE or the motor will stall.

### STEP 4

When too much pressure is necessary, relieve the handle, and come down again. Too much pressure on the pusher handle will make the ice come out coarse; too little pressure makes the ice mushy.

### SNO-KONE SUPPLIES

Servings:		250	500	1000	2000
Flavored Syrup	1 GAL	2	5	10	20
Cones	200 PACK	1	3	5	10



EVENT SOURCE  
PANACHE EVENTS

consistently delivering™

**EVENT SOURCE**  
EventSource.com  
877.901.0000

**PANACHE EVENTS**  
PanacheEvents.com  
800.30.PARTY (72789)

### AFTER HOURS

Call above toll free numbers and press Option 2. Please leave a message and we will respond shortly.

### SKU 554-700 INCLUDES

Main Unit  
Cone Trap  
Scoop

### OPTIONS

Flavored Syrups in Lime,  
Blue-Raspberry, Cherry  
Pumps  
Cups



### WARNING

Machine must be properly grounded to prevent shock in case of electrical problems. The motor is 110V, single-phase, 60 cycle, AC current.



### NOTE

During normal operations, the surface temperature will reach 150°F.