

WOOD BURNING PIZZA OVEN



INSTRUCTIONS

STEP 1

Remove cover.

STEP 2

Remove front door and place wood (not included) inside oven.

STEP 3

Light wood.

STEP 4

Once you reached desired temperature use brush (not included) to push wood to rear of the oven.

STEP 5

Oven will then be ready to use. Adjust flames to desired heat for cooking. The small front door closure avoids heat loss; it is possible to remove this door during operation.



EVENT SOURCE
PANACHE EVENTS

consistently delivering™

EVENT SOURCE
EventSource.com
877.901.0000

PANACHE EVENTS
PanacheEvents.com
800.30.PARTY (72789)

AFTER HOURS

Call above toll free numbers and press Option 2. Please leave a message and we will respond shortly.

SKU 302-1800



NOTE

No propane or kit needed.

Wood and wood brush not included.